



## iPLAYMATE Tennis

Quick Start Guide



iPod touch  
4th generation  
8GB 32GB 64GB



iPod touch  
3rd generation  
32GB 64GB



iPhone 4S  
16GB 32GB 64GB



iPhone 4  
8GB 16GB 32GB



iPhone 3GS  
8GB 16GB 32GB

Made for



iPod



iPhone



# iPLAYMATE Tennis

## Copyright by METALTEK

All rights reserved. This document is supplied to the user with the understanding that no part of the contents may be reproduced or transmitted in any form or by any means without the written permission of METALTEK.

METALTEK has attempted to insure that the information included in this document was accurate and correct at the time of printing. METALTEK cannot be held accountable for typographical errors or mistakes. The information in this document is subject to change without notice.

“Made for iPod” and “Made for iPhone” mean that an electronic accessory has been designed to connect specifically to iPod or iPhone respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod or iPhone may affect wireless performance.

iPhone and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc.

## Disclaimer

Information in this document is subject to change without notice and does not represent a commitment on the part of METALTEK.

METALTEK provides this document “as is”, without warranty of any kind, either expressed or implied, including, but not limited to, the particular purpose. METALTEK reserves the right to make improvements and/or changes to this manual or the product(s) described herein at any time.

Information provided in this manual is intended to be accurate and reliable. However, METALTEK assumes no responsibility for its use, or any infringements on the rights of fourth parties that may result from its use.

This manual could include unintentional technical or typographical errors. Changes are periodically made to the information herein, with the changes incorporated into new editions of the publication.

# Preparing the Ball Machine

Your new iPLAYMATE Tennis receiver should be ready for use in only a few minutes by completing the following easy steps.

- 1. HANG IT** – Hang the iPLAYMATE Tennis receiver onto the hopper. As an option, you can use the included velcro to mount it more securely.



- 2. PLUG IN THE CORD** – Plug one end of the included retractable cable into the iPLAYMATE Tennis receiver. Plug the other end of the cable into the port next to the power switch on the ball machine. Although this cable looks like a standard coiled telephone cable, it is NOT. Please only use the cable included with the iPLAYMATE Tennis receiver.



- 3. TURN ON THE BALL MACHINE** – Plug in the ball machine and turn its power switch to the ON position.

# The App

Download the **Like My Drill** app on your iPod touch® or iPhone® in order to load drills onto or control your ball machine.

1. **DOWNLOAD THE APP** – Go to the App Store<sup>SM</sup> on your iPod touch or iPhone and purchase and download the **Like My Drill** app.



2. **REGISTER** – Go to [www.PlaymateTennis.com/LikeMyDrill](http://www.PlaymateTennis.com/LikeMyDrill) and click on Sign Up or tap the Sign Up button in the **Like My Drill** app.
3. **CHECK EMAIL** – Go to your email and look for a PLAYMATE Tennis Drill Community email. Inside this email is a link to Complete Registration. Click on the link to automatically complete your registration.
4. **SIGN IN** – Start the **Like My Drill** app on your iPod touch or iPhone. Enter your email address for Username and your selected password for Password.

A screenshot of the 'Sign In' screen from the 'Like My Drill' app. The screen is displayed on an iPhone/iPod touch interface. At the top, the status bar shows 'AT&T', signal strength, Wi-Fi, the time '9:28 AM', and battery level '88%'. The title 'Sign In' is centered at the top of the app's interface. Below the title, there are two input fields: 'Username' with the placeholder text 'name@example.com' and 'Password' with the placeholder text 'password'. Below these fields is a 'Sign In' button. At the bottom of the screen, there is a link 'Don't have an account?' and a 'Sign Up' button.

For instructions and info about using Like My Drill, visit:  
[www.PlaymateTennis.com/iOS/Support](http://www.PlaymateTennis.com/iOS/Support)

# FCC

This device contains

FCC ID: PVH0925

IC: 5325A-0925

This device complies with Part 15 of the FCC rules.

Operation is subject to the following two conditions;

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.



800.776.6770  
[www.playmatetennis.com](http://www.playmatetennis.com)



METALTEK  
455 Kitty Hawk Drive  
Morrisville, NC 27560  
919.544.0344 tel  
919.544.1430 fax